

Gun Foam Use Guidelines

ALWAYS review and follow the directions provided in your foam kit. The below instructions are a general overview. ENSURE you follow all safety precautions including wearing protective eyewear and gloves.

- 1. Apply petroleum jelly to gun basket before attaching can.
- Point gun in a safe direction (into a trash can), depress trigger and screw can onto gun basket. Do not over-tighten.
- 3. After attaching gun to can, shake vigorously for 30 seconds.
- 4. Press trigger to dispense foam with can upside down. Test bead size on scrap material.
- 5. Fill cracks and gaps as needed, allowing space for foam expansion.
- 6. Foam can be trimmed, painted, sanded or plastered after curing completely.

Can Replacement:

- 1. Point gun in safe direction, depress trigger and quickly remove empty can.
- 2. Spray gun basket with PolyClean gun cleaner and immediately attach a new can to prevent foam from hardening in the gun.
- 3. Follow directions above.

Storage:

- 1. Turn off gun flow control knob at back of gun.
- 2. Store can upright with gun attached.
- 3. To restart, shake well for 30 seconds, open flow control knob and dispense foam. Maximum storage: 15 days.